



2015 Outlaw Chin Spoiler Hardware Kit
FOR Vehicles Equipped with Performance Pack Chin Spoiler ONLY
CDC# 1511-6509-01



Note: READ instructions before starting installation!!!

Components:

- 5 – 35mm Aluminum Spacers
- 5 – M6-1.0 x 55mm Bolts
- 5 – 1/4" Washers
- 5 – M6-1.0 loose washer nuts
- 2 – Scrivets

CDC Part#

- 57000
- 15006
- 183008
- 183034
- 181700

Tools Required:


- Panel Removal (fork tool) •7mm Socket •1/4" drive ratchet •1/4" Drill •5/16" Drill •Drill motor
- Razor knife/blade •Pick tool •10mm Socket •Jack Stands •Jack

Hardware Kit Installation

1. **OPTIONAL:** Lift car with jack and safely position car on jack stands, to gain easy access to Splash Guard and Chin Spoiler fasteners.
2. Remove the 7mm Fasteners and push pin retainers that secure the Splash Guard. Place Splash Guard aside as it will be reinstalled later.



3. Remove the Performance Pack Chin Spoiler. Remove all the 7mm fasteners and push pin retainers. **Note:** The Factory Chin will NOT be reinstalled.

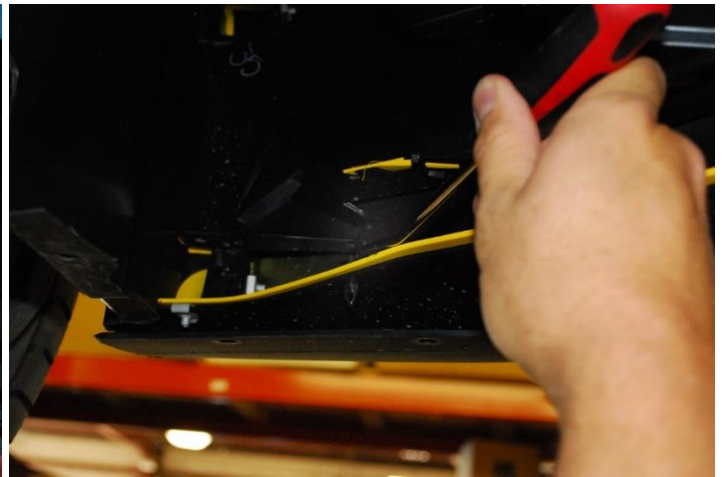

4. Remove "J" Clips from Fascia and Splash Guard. **Note:** Clips will NOT be reinstalled.



CD4II3DO


5. Reinstall the Splash Guard, using all the fasteners previously removed, excluding the 7mm screws that attached to the bottom of the factory Chin Spoiler.



6. Starting with the center hole in the Splash Guard, use the supplied 35mm Spacer as a drill guide to drill a $\frac{1}{4}$ " hole in the lower portion of the Fascia as shown. **CAUTION:** Do NOT drill through the top side of the Fascia. Open hole size to $\frac{5}{16}$ " without the spacer.




7. Install Spacer. Insert bolt and washer from the bottom, place nut on top. Tighten nut and bolt (10mm).

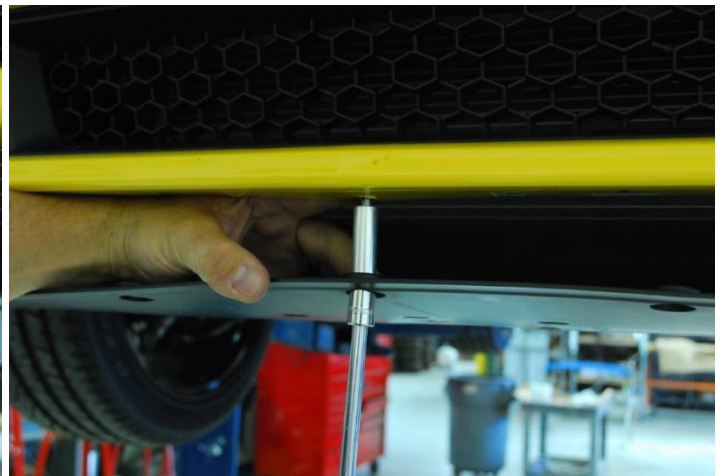

CD4II3DO

8. Repeat process at the other 4 locations shown in pictures below.

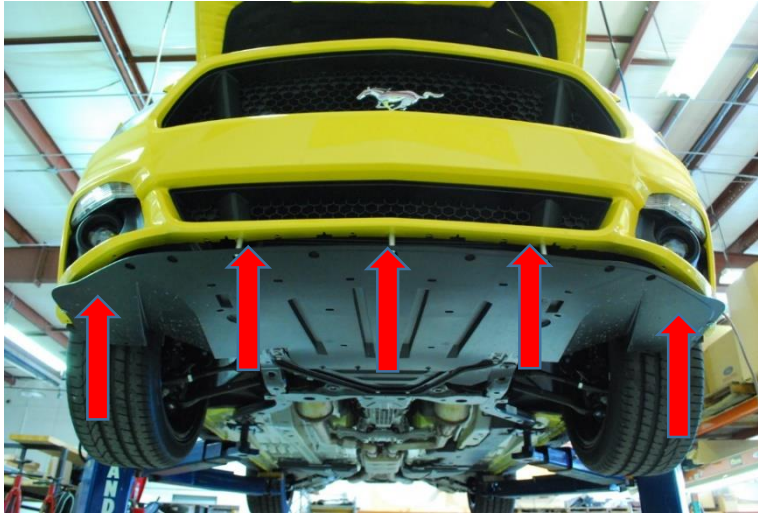

9. Install supplied Scrivets. Drill 1/4" holes in locations shown below (driver and passenger sides), insert Scrivet and depress center.



CD4II3DO

Picture below for reference, after the Outlaw Chin Spoiler has been installed. **NOTE:** The Splash Guard will rest on the Chin where the arrows are pointing.



NOTE: These are supplemental instructions for the HARDWARE KIT ONLY, please refer to the Outlaw Chin Spoiler Instructions to complete your install.

Thank you for choosing Classic Design Concepts for your restyling needs. If you have any questions or concerns regarding installation, please contact Tech@CDCdetroit.com or call 866-624-7997.