




2015-17 Outlaw Chin Spoiler Hardware Kit Supplement
FOR Vehicles Equipped with Performance Pack Chin Spoiler ONLY
CDC# 1511-6509-01

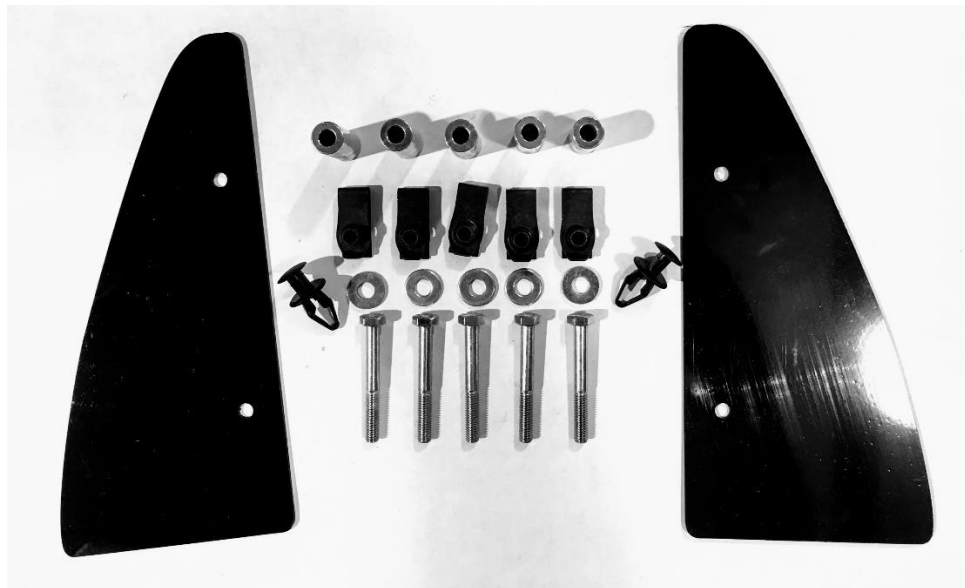

Note: READ instructions before starting installation!!!

Components:

- 3 – 35mm Aluminum Spacers
- 2 – 25mm Aluminum Spacers
- 5 – M6-1.0 x 50mm Bolts
- 5 – ¼” Washers
- 5 – M6-1.0 “U” Clips
- 2 – Scrivets
- 2 – Splash Shield Extensions

CDC Part#

- 57000
- 57001
- 15006
- 183008
- 50012
- 65005
- 1511-2301-01

Tools Required:

- Panel Removal (fork tool) •7mm Socket •1/4” drive ratchet •1/4” Drill •5/16” Drill •Drill motor
- Razor knife/blade •Pick tool •10mm Socket •Jack Stands •Jack