


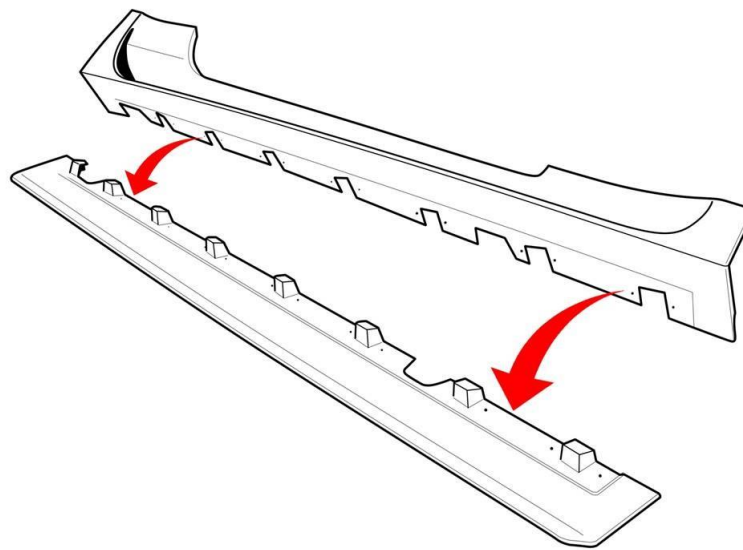

**2015-2017 CDC Outlaw Splitters
Part # 1511-7009-01**

Note: The Outlaw Splitters are designed to work exclusively with the CDC Outlaw Rockers. Cutting the Factory Rocker (for lower mounting bracket) is no longer necessary when paired with these OPTIONAL Splitters. Splitters are molded in black textured ABS that is UV stable. Utilizes OE mounting points.



Read Instructions thoroughly before beginning installation.

Hardware Kit:

- 1 - 3M Acrylic Foam 1/2"x156"
- 28 - 3/16" Rivets
- 28 - 3/16" Backer Washers
- 4 – Adhesion Promoter Packs
- 4 – Alcohol Packs

CDC Part #


- 950038
- 75001
- 55004
- 950007
- 950006

Tools Required:


- Cordless Drill
- 3/16" Drill
- 3/4" Masking Tape
- Rivet Gun
- Razor Blade (to cut 3M tape)

Installation Instructions

1. Apply 3/4" masking tape the entire length of the parts, approximately 1/8" from the edge of the Splitters.


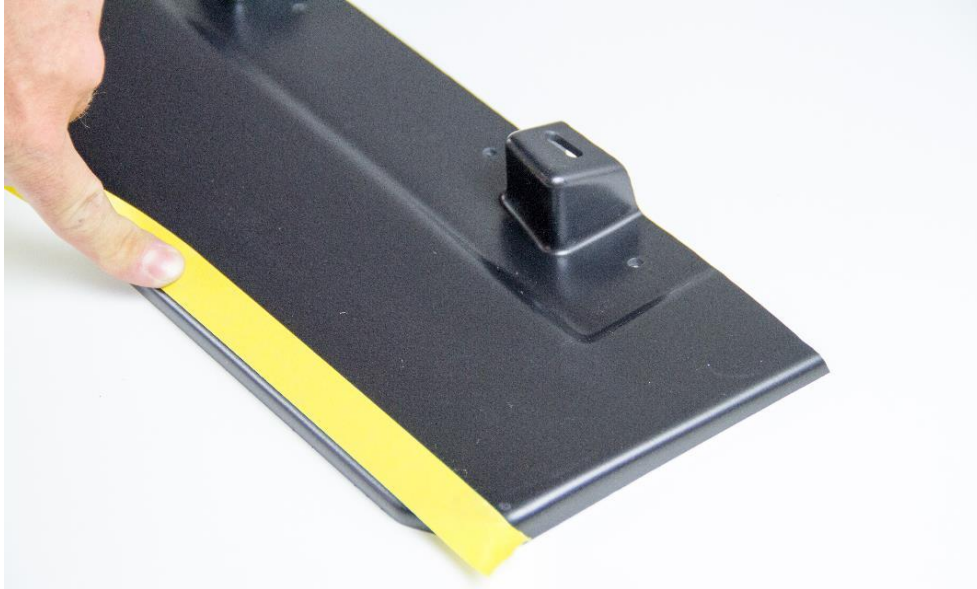


2. Clean with the supplied Alcohol and allow to dry. Apply the included Adhesion Promoter and allow to dry. Remove masking tape.

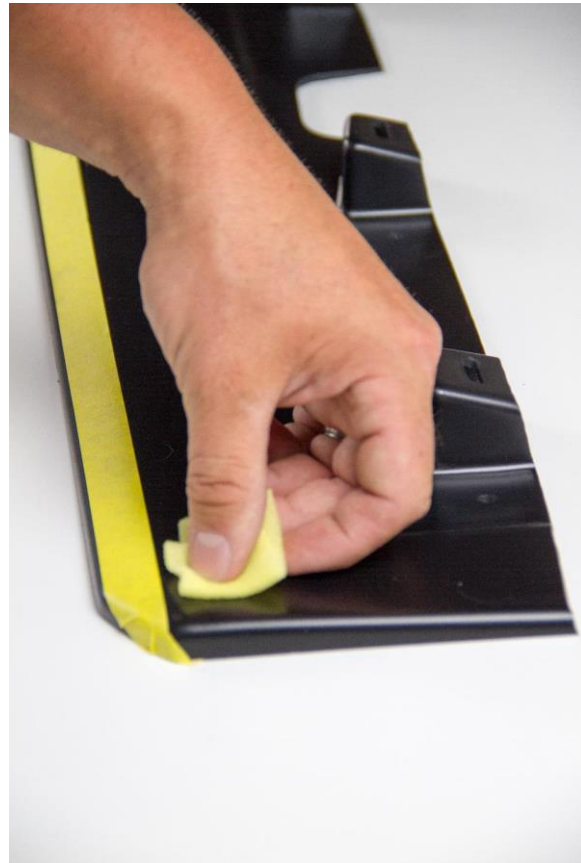

CD4I13DR

3. Clean the bottom side of the Outlaw Rockers with Alcohol and allow to dry. Apply Adhesion Promoter and allow to dry. Apply 3M Acrylic Foam Tape the entire length of the Rocker. Cut to length with razor blade. Press firmly to activate tape.

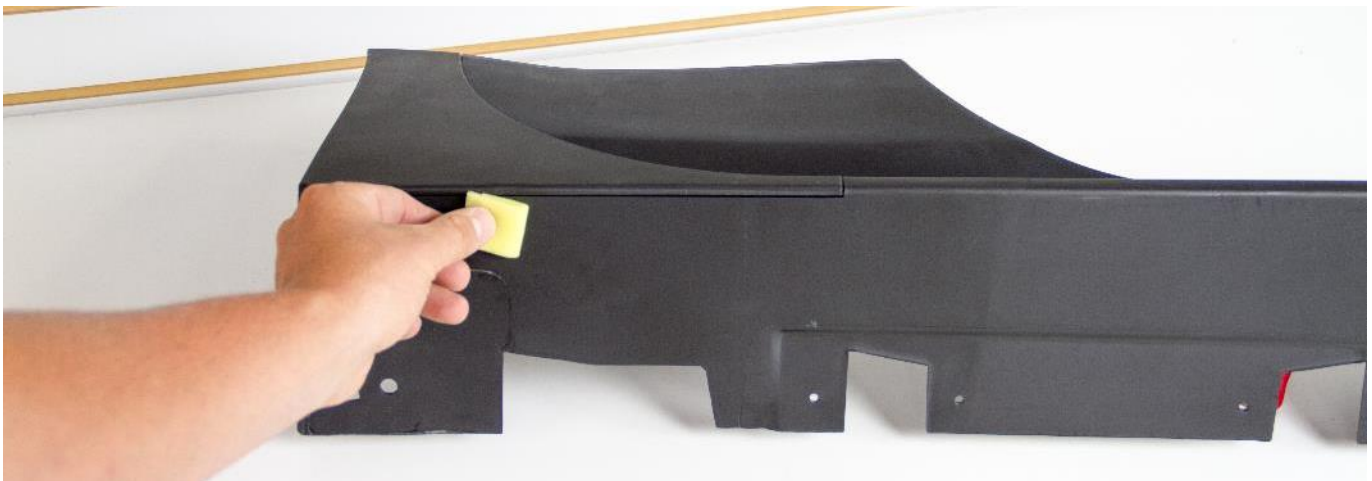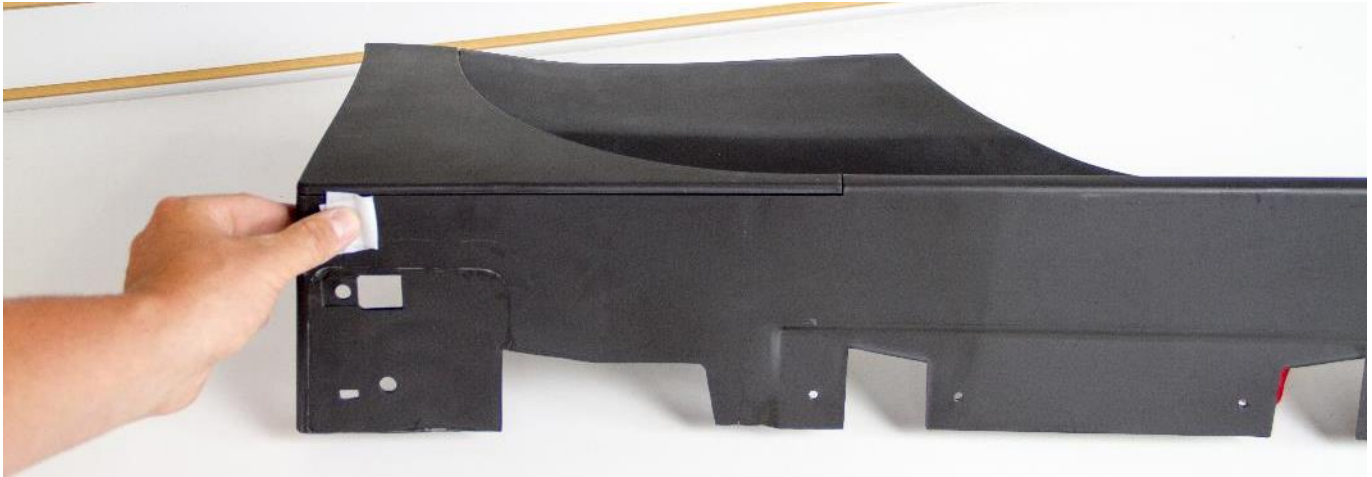

CD4II3DR

4. Align the 3/16" hole at the front of the Rocker to the 3/16" hole in the Splitter. Install the Rivet with the 3/16" Backer Washer on the inside of the Rocker.



5. Align the last 3/16" Holes at the rear of the Rockers/Splitters. Install the Rivet with the 3/16" Backer Washer on the inside of the Rocker. **Note:** If holes don't line up perfectly, open with your drill. The heads of the rivets are oversized to accomadate.



CD4II3DR

6. Drill 3/16" hole through Rocker and Splitter in position shown below. Location is approximately 1" from back edge of Rocker and 1" from "dog house". Install Rivet with Rivet Washer.



7. Install the remaining Rivets and Rivet Washers.
8. Peel the red backing from the 3M tape and press part firmly together.



Congratulations, you are ready to install your Rocker/Splitter assembly!

Thank you for choosing Classic Design Concepts for your restyling needs. If you have any questions or concerns regarding installation please contact Tech@CDCdetroit.com or call 866-624-7997.